


Quick measurement (horizontal dimensions), inside view

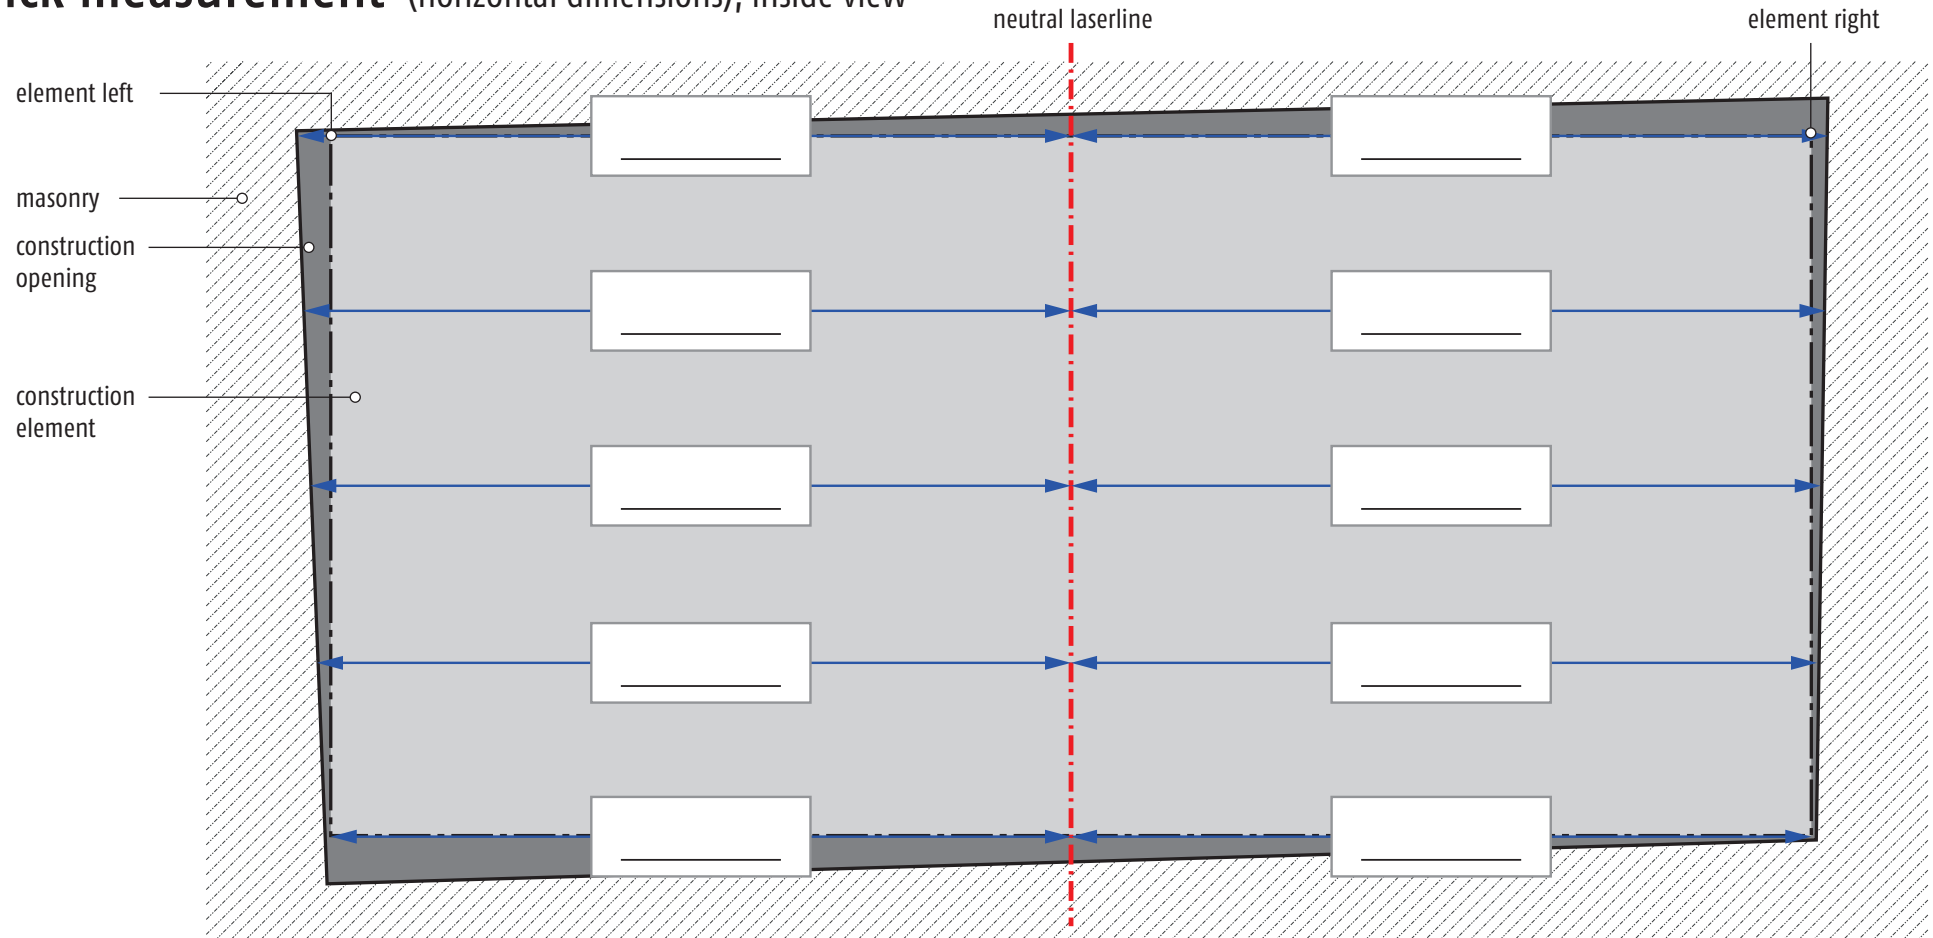

Order dimensions minus shim space for installation (as determined by installation contractor).



+



=



smallest dimension of element left, minus shim space

smallest dimension of element right, minus shim space

order dimension




Laserline

The height of the opening (left, center, right) as well as the width (top, center, bottom) must be measured. If recessed sill is being used the recess must be added to height dimension. Use the **smallest dimension** which is most relevant for production!



Dimensions are to be taken every 12 – 20 inches depending upon system parameters.

Quick measurement (vertical dimensions), inside view

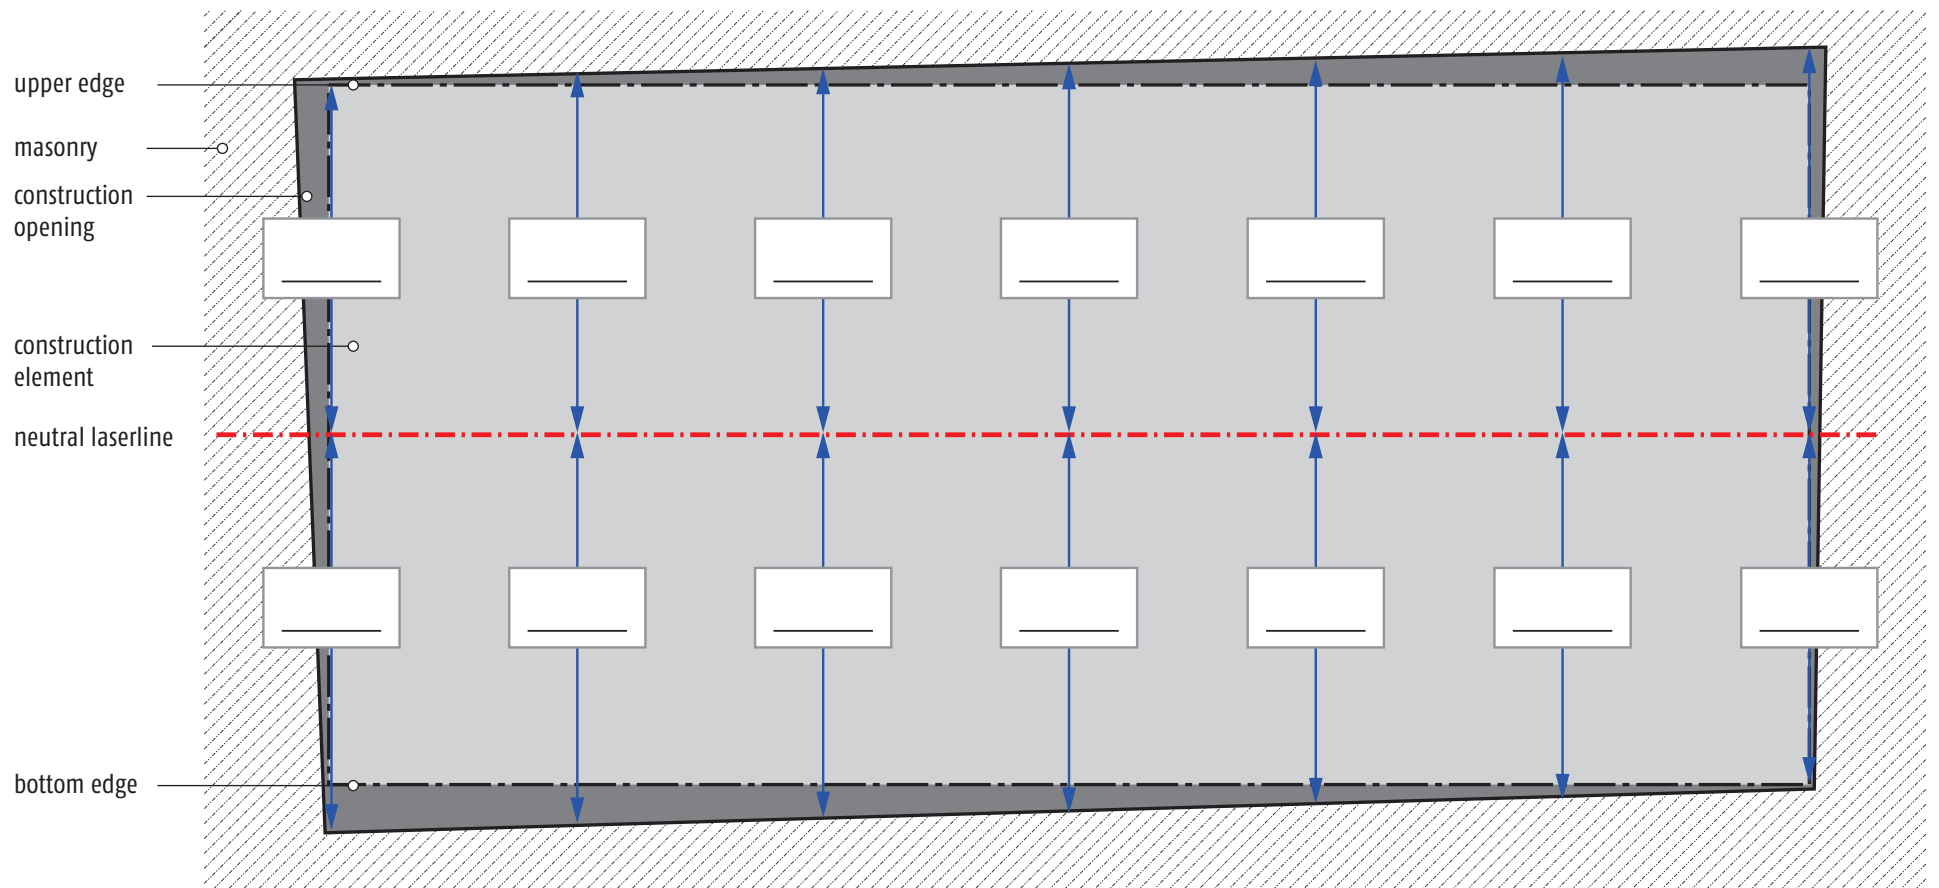

Order dimensions minus shim space for installation (as determined by installation contractor).



+



=



smallest dimension lower edge minus shim space

smallest dimension upper edge minus shim space

order dimension



Laserline

The height of the opening (left, center, right) as well as the width (top, center, bottom) must be measured. If recessed sill is being used the recess must be added to height dimension. Use the **smallest dimension** which is most relevant for production!



Dimensions are to be taken every 12 – 20 inches depending upon system parameters.